



ClearSounds®

Hear how good life can be

English

Français

Español

CL1

Loud N' Clear™ Telephone Ring Signaler



User's Guide


Important Safety Instructions

When using your CL1 signaler, always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons, or property, including the following:


1. Read and understand all instructions, warnings and product markings.
2. Be aware there is a slight possibility of electrical shock from lightening.
3. Do not use this product near or in water or when you are wet. If the product comes in contact with any liquid, unplug the power cord and telephone cord immediately. Do not plug the product back in until it has dried completely.
4. Do not use liquid or aerosol sprays for cleaning.
5. If this product does not operate properly, refer to the Warranty information on page 8 of this manual. Do not open this product as you may expose yourself to hazardous voltages or other risks. Opening this product automatically voids the warranty.
6. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power supply cord or plug is damaged or frayed.
 - b. If liquid has been spilled on the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in further damage.
 - e. If the product has been dropped or appears damaged.
 - f. If the product exhibits a distinct change in performance.

SAVE THESE INSTRUCTIONS

Functions

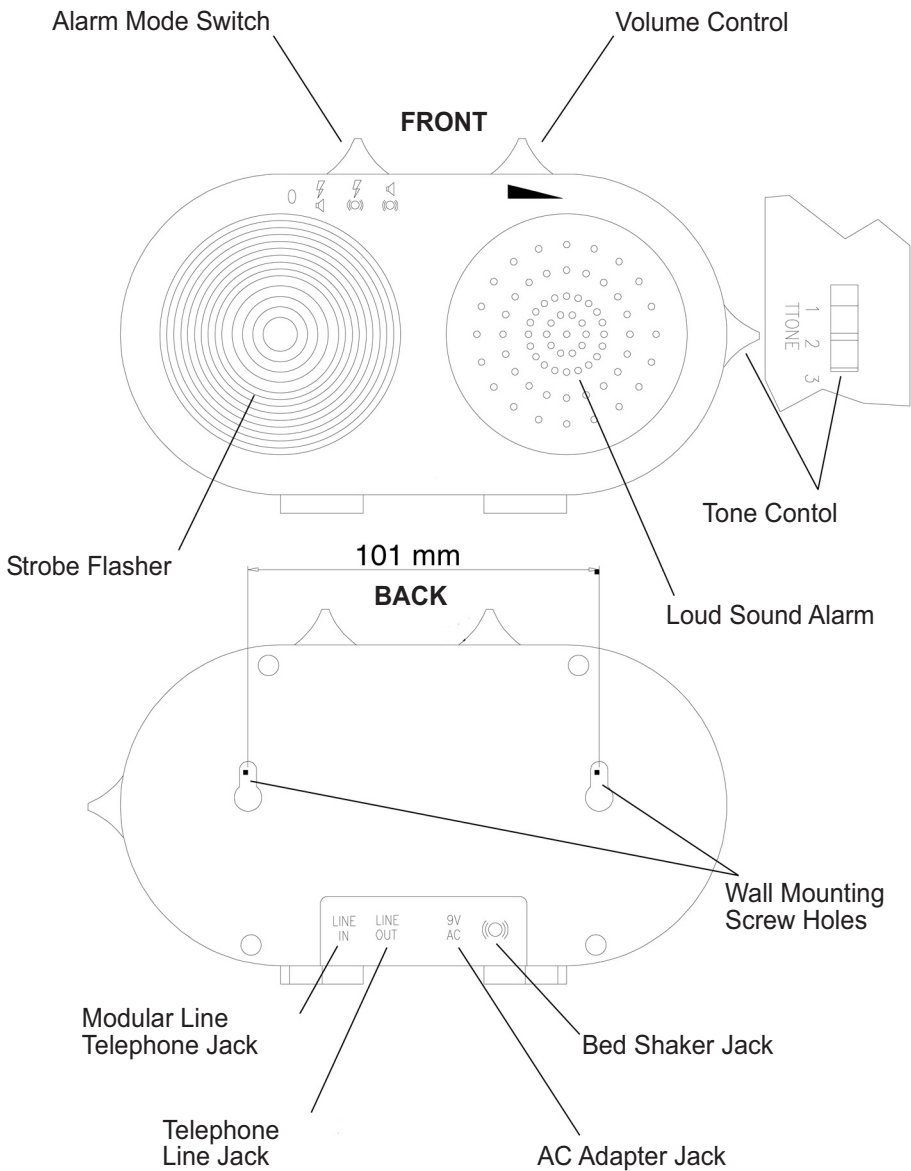

Installation

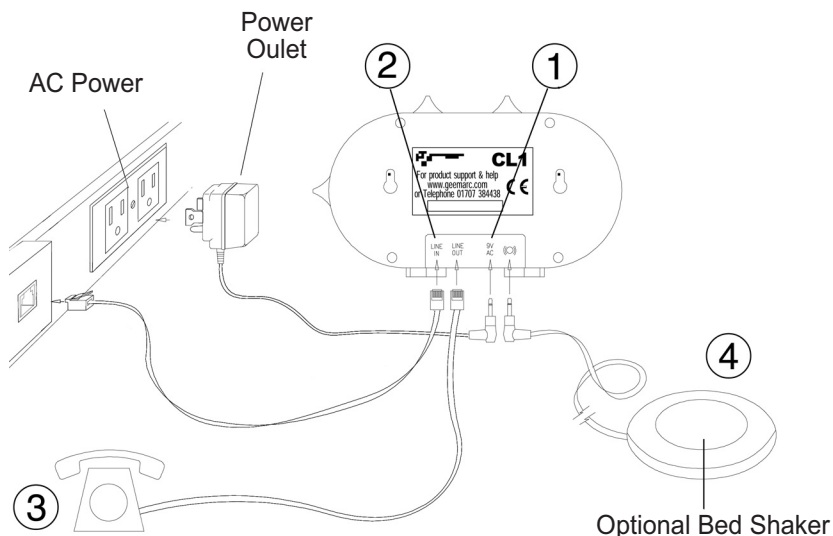





1. Plug the AC power adapter into the 12V DC Jack on the back of the CL1 and then into your wall outlet.
2. Plug one side of the phone cord (included) into the LINE IN jack on the back of the CL1 and the other side into your wall jack.
3. Plug your telephone into the LINE OUT jack on the back of the CL1. **NOTE: The CL1 can operate independently without the telephone. Simply follow steps 1 & 2.**
4. At your option, plug the Optional Bed Shaker into the shaker jack on the back of the CL1 & place the shaker under your pillow or mattress

Your CL1 is ready for use. Now you simply need to adjust the settings to fit your needs.


Operation

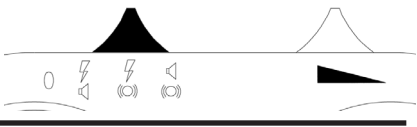1. Set the Alarm Mode.



- 0 No Alarm
-  Both Strobe Flasher & Sound Alarm
-  Both Strobe Flasher & Shaker
-  Both Sound Alarm & Shaker

2. Adjust your Volume Control



This increases or decreases the volume of the Sound Alarm.

3. Adjust your Tone Control



This shapes the sound by increasing the frequencies of the Sound Alarm.

Regulatory Compliance

Part 68 of FCC Rules Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company. A plug and jack used to connect this CL1 to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug, RJ11 USOC, is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label. If this telephone equipment, the CL1, causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If trouble is experienced with this telephone equipment, for repair or warranty information,

please contact ClearSounds Communication at 1-800-965-9043. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

DO NOT DISASSEMBLE THIS EQUIPMENT. This telephone equipment is not intended to be repaired and it contains no repairable parts. Opening the equipment or any attempt to perform repairs will void the warranty. For service or repairs, call 1-800-965-9043. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirements that the sum of the Ringer Equivalence Number of all the devices does not exceed five.

Should you experience trouble with this equipment, please contact: **The Canadian Service Center** is Hall Telecommunications, 5477 R.R. #5, Hwy #6 North Guelph, Ontario, Canada N1H 6J2. Tel no: 519-822-5420 Fax No: 519-822-5462. **The US Service Center** is ClearSounds Communications 8160 S Madison St - Burr Ridge, IL 60527 USA .Tel No: 800-965-9043 V or 800-814-5359 TTY. Fax No: 888-654-9219. Email: info@clearsounds.com. Contact Name: Customer Service for repair or warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Limited Warranty

ClearSounds Communications warrants the CL1 Loud N' Clear Phone Signaler against any defect in materials or workmanship for the period of one year from the date of purchase.

Within a period of one year from purchase date, ClearSounds Communications will repair or replace (at our discretion) your CL1 Phone Signaler at no cost. If we elect to replace your signaler, we may replace it with a new or reconditioned product of the same or similar design. Repair or replacement will be warranted for a period of 90 days or the original time on the original warranty, whichever is longer.

The guarantee does not cover accidents, negligence or breakage to any parts. This includes shipping damage, failure to follow instructions, misuse, fire, floods, use of incompatible accessories, Acts of God or failure in your phone service carrier's line service.

The product must not be tampered with or taken apart by anyone who is not an authorized ClearSounds Communications representative. Tampering with the CL1 will void any written or implied warranties.

ClearSounds Communications shall not be responsible for loss of time, inconvenience, loss of use of your CL1, property damage caused by your CL1 or any other incidental or consequential damages.

Warranty service is available only with proof of purchase.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM

Shipping cost must be prepaid and the product must be packaged appropriately for shipping.



ClearSounds®

Hear how good life can be

For product support and help visit our website at

www.clearsounds.com

e-mail: info@clearsounds.com

Telephone: 800-965-9043

TTY: 888-814-5359

Or fax: 888-654-9219